

# BUILT STRONG

## SMARTVIEW 2.0 MONITORING

### Your Elevator Activity From Anywhere

Inside the Machine Room (Local)



CONNECT:

FOR:

- Mechanic

Outside the Machine Room (Remote)\*



Ga UffjgYGYW fY  
7'ci X'GYfj Yf

- Elevator Contractor
- Institutions with Their Own Service Team
- Building Lobby
- Security Desk
- Building Manager
- Consultant

\* Requires Internet Connection


### How the Data is Collected.

Real-time data from your elevator is collected through a device we call Data Acquisition Device (D.A.D.).


### K \ UhSmartrise Gives You.

- Ö [ [ ! Á cæ • Áæ áÁææÉ
- Öç] æ ã^á^ Fault information to **troubleshoot straight from the system.**
- ÓæÁ} Éjã^Áæ áÁ^Éjã^Áæ • É
- ÓæÁ} [ • áá } Éáá^&çj } Áæ áÁ} ^^áÉ
- U] ^!ææj } æÁææ^Ç [ ; { æÉá^É^Á&æj}Éjã^á^ } á^} çÄ^É
- Çç^!æ^Á ææáá^ Á^Éæáá
- Calls per hour.
- Run data.
- Run counter (total number of runs for a car by day/week/month/year/ or time range).
- Distance counter (traveled by day/week/month/year/or time range).
- Mode data.
- **Mobile alerts.**
- **Ability to command the elevator from the system.**

### Sample Screen Shots

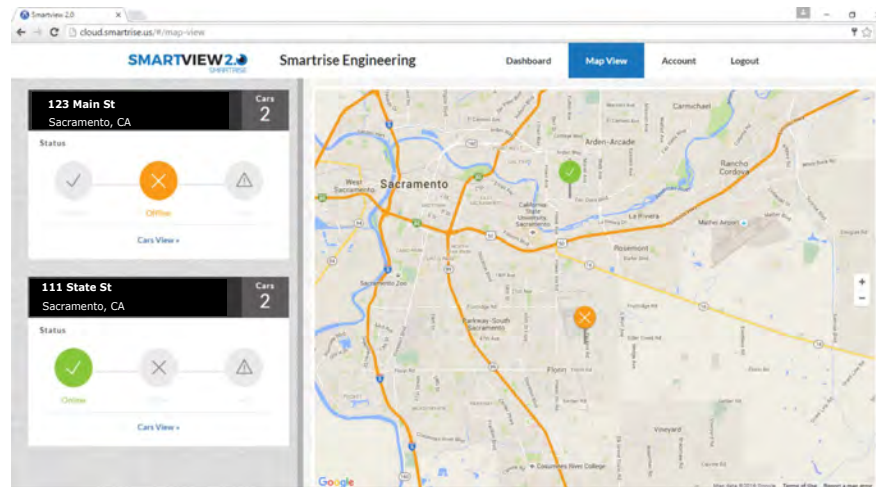

**Remote Map View Screen -** view all of your jobs via their location on a map.

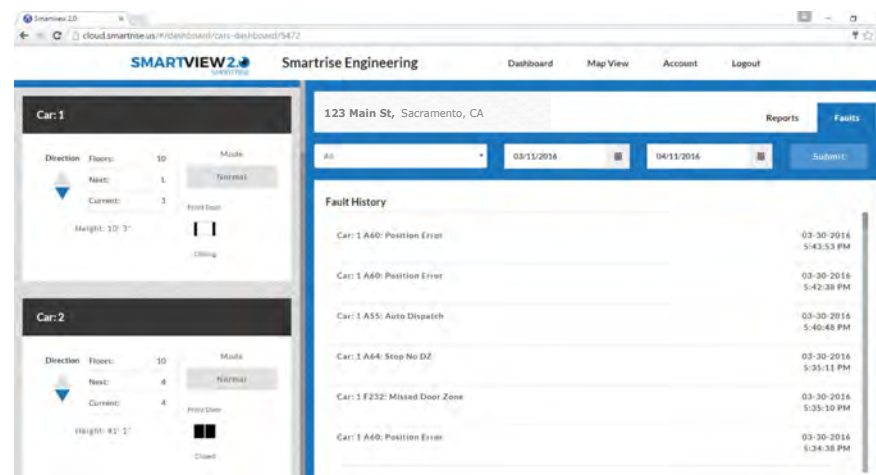

**Local Car View Faults-** view active faults. You can click on a fault for more detail.